1310W DRY IRON

Model Number: IG3120

INSTRUCTIONS FOR USE

Thank you for purchasing this product.
Please read these instructions carefully before use

SAFETY INSTRUCTIONS

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Please read all instructions carefully before using the iron for the first time.
- Before plugging in the iron, check if the voltage indicated on the rating label corresponds with the main voltage in your home.
- Do not use the iron for anything other than its intended use.
- The iron should always be switched off with the temperature control dial before connecting or disconnecting from the power supply.
- Do not pull on the cord to disconnect the plug from the wall socket.
- Do not use the iron if it is damaged in any way.
- Do not use the iron if the power cord or plug are damaged. Do not replace the power cord or any other parts yourself.
- When you have finished ironing, or when leaving the iron unattended, turn the temperature control dial to its minimum setting and unplug from the mains power supply.
- Always stand the iron upright and disconnect from the power supply when not in use.
- Do not allow children to touch the iron or power cord when ironing.
- Do not immerse the iron or cord in water or any other liquid.
- Do not touch hot metal parts as this may cause burning.
- The plug and cord should not be allowed to touch the soleplate. Let the iron cool down completely before putting it away.
- This iron is for household use only.
- When placing the iron on its stand, ensure the surface on which the stand is placed is stable.
- The iron should not be used if it has been dropped, if there are visible signs of damage.
- Children should not be allowed to play with the iron.
- Some parts of the iron may have been slightly greased and so the iron may smoke slightly when switched on for the first time. Clean the soleplate with a soft cloth.
- Before ironing for the first time, test the iron using an old piece of fabric to ensure the soleplate is completely clean.

SPECIFICATION

Supply Voltage:	220-240V ~ 50Hz
Maximum Output:	1100-1310W

IG3120 – Dry Iron at a Glance

A – Temperature control dial
B – Soleplate
C – Pilot light
D – Cord protector
E – Mains cord

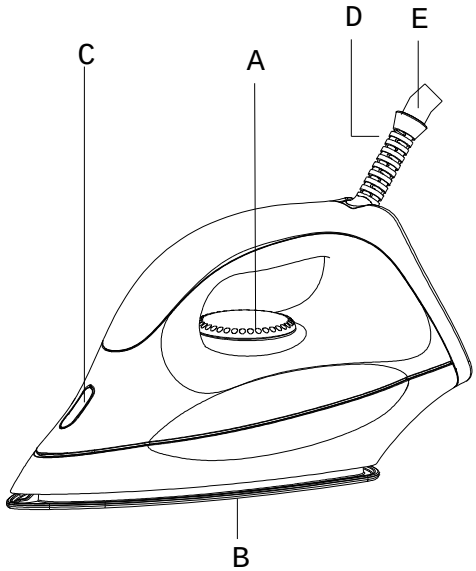

TEMPERATURE CONTROL SETTING

- Always check the garment label for ironing instructions before ironing the garment. If the label is missing then the table (right) may help you.
- First sort out the laundry; wool with wool, cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature setting and progress to the higher temperature settings because the iron heats up quicker than it cools down.
- If the fabric consists of various kinds of fibres (e.g. cotton with polyester) you must always select the ironing temperature for the material with the lowest advised temperature.

Label	Kind of Textile	Fibre Material
	Synthetic	Acrylic Modacryl Polypropylene Polyurethane
	Synthetic	Acetate Triacetate
	Synthetic	Cupro Polyamide (nylon) Polyester Modal Viscose (Rayon)
	Silk	Silk
	Wool	Wool
	Cotton	Cotton
	Linen	Linen

OPERATING THE IRON

- Insert the plug in the power socket and stand the iron upright.
- Turn the temperature control dial (A) to the desired temperature setting.
- When the desired temperature has been reached the pilot light (C) will go out. The pilot light will turn on and off from time to time, indicating that the selected temperature is being maintained.
- When ironing is finished disconnect from the mains.

CARE AND CLEANING

- Allow the iron to cool completely before cleaning.
- The casing can be wiped with a damp cloth and polished with a dry cloth.
- Never use abrasives to clean the soleplate.
- Keep the soleplate smooth, avoid contact with metal objects.

STORAGE

- Turn the temperature control dial (A) to the minimum position.
- Disconnect from the plug from the power socket.
- Stand the iron in the upright position and let it cool down completely.
- Always store the iron in an upright position.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating.

ENVIRONMENT

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfill or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

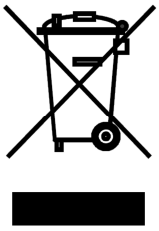

This product carries a 2 year guarantee. If you experience any problems with your Igenix product please call our Customer Services Department on 01473 271 272.

IGENIX

Distributed by Igenix at Pik-a-Pak Home Electrical
38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR
Tel: 01473 271 272

View the full range at www.igenix.co.uk